

Element Name:  
**PWC Lift Installation  
 (Leg Adjustment)**



- Base
- With
- Less

Date Purchased: \_\_\_\_\_

Author: JBC

Size of lift: \_\_\_\_\_

Date Modified: March 10, 2011

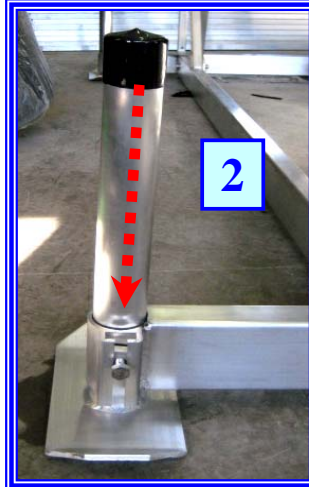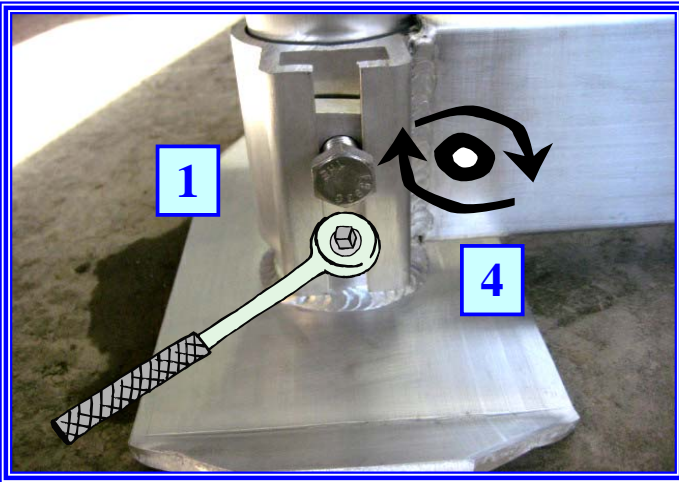

**Pick a convenient spot to place your lift. Ensure the bottom has a solid base before setting the lift. It may be necessary to place patio slabs on the bottom for the base feet to sit on to ensure a solid placement. All adjustments and installations should be made with the top bunk in the fully raised position**

- 1 Loosen bolt on leg bracket with a 3/4" or 19mm socket or wrench.**
- 2 Raise or lower the leg to the desired height**
- 3 Check for side to side and front to back level. Adjust legs as required**
- 4 Ensure all leg adjustment bolts are tight**

NOTES AND COMMENTS:

# Instruction Sheet

Product  
**PWC Lift**

Element Name:

**Replace PWC Lift Cable**


- Base
- With
- Less

Date Purchased: \_\_\_\_\_



Size of lift: \_\_\_\_\_

Author: JBC

Date Modified: March 10, 2011

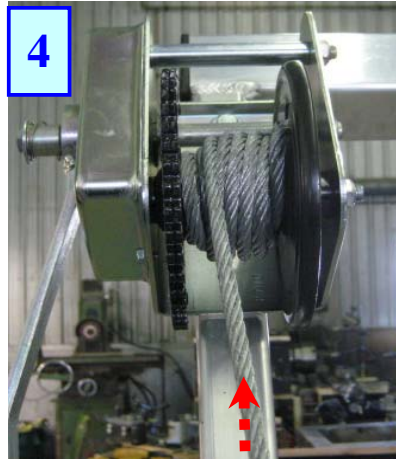

- 1** Connect clamp to top mount
- 2** Route through pulley (#1)
- 3** Route through pulley (#2)
- 4** Connect to winch and wind up excess cable

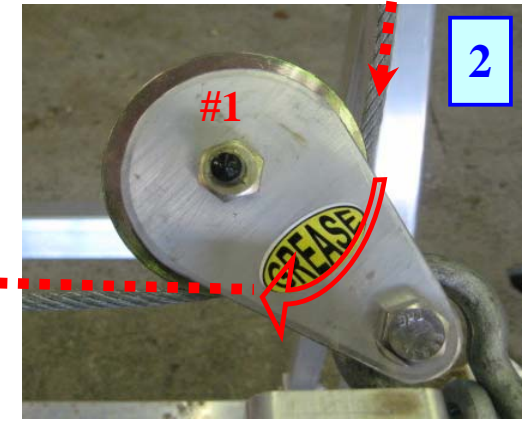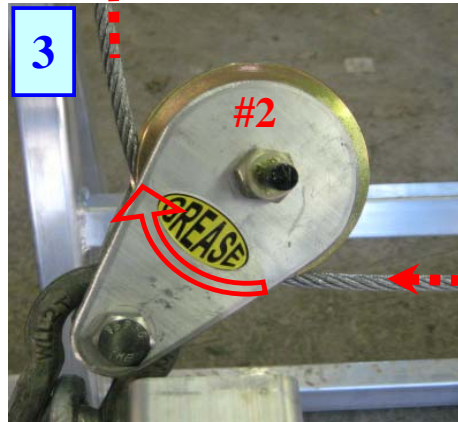

NOTES AND COMMENTS:

